


44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	24	23	22	21
Screw 8 x 55 mm	Protect cap	Nut M6	Nut w8	Nut M10	Washer 6 x 16 x 1 mm	Knob	Washer 10 x 20 x 2 mm	Washer 8 x 16 x 1,5 mm	Screw 8 x 45 mm	Screw 10 x 110 mm	Screw 8 x 20 mm	Screw 8 x 40 mm	Pin	Screw 10 x 60 mm	Screw 10 x 55 mm	Screw 8 x 50 mm	Foam	Foam tube	Foam	Foam	Protect cap	Protect cap
IX	ZX	2× XX	7×	7	2 × ×	2 x	3 × /×	74x	Zx	Zx	4x	4x	XX	2 X	XX	o ox	XX	, X	, ox	ZX	3 ×	4:

PART LIST:

ASSEMBLY

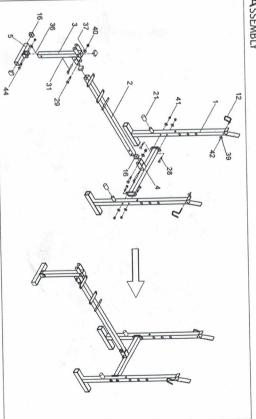

STEP 1 connect the cross beam (4) to the two uprights (1) use 4 sets of screw (28), washer (36) and nut (41), attach the main beam (2) to the center of the cross beam (4) use one set of screw (29), washer (37) and nut (40), insert the pin (31) to the hole of the main beam (2). Then fix the front upright (3) to the front stabilizer (5) use one set of screw (44), washer (36) and nut (41), and connect the front upright (3) to the main beam (2) use one set of screw (29), washer (37) and nut (40), insert the pin (31) to the hole of the main beam (2).

17 16 15 14

End cap

End cap

&× 10x

7×


5× × 1×

4×

End cap


End cap End cap Seat

Backrest

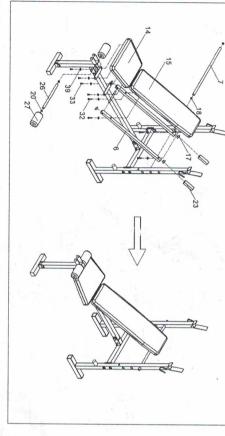

STEP 2 Inst

Insert the cross bar (7) to the hole of the two uprights (1), attach the foam (23) to the pivot bar (6), attach the pivot bar (6) to the main beam (2), fix the backrest (15) on the pivot bar (6) use 4 sets of screw (32) and washer (36), then fix the seat (14) on the main beam (2) use 4 sets of screw (33) and washer (36), insert the foam tube (26) to the front upright (3) and attach the foam (27) to the foam tube (26).

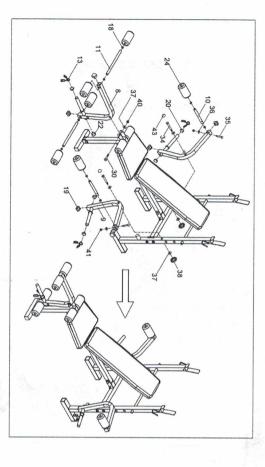


STEP 3

Attach the foam (24) to the foam tube (10), insert the foam tube to the fly arm (9) use one set of screw (35), washer (36) and nut (41), then fix the two fly arms to the two uprights (1) use 2 sets of screw (34), washer (37), and knob (38), and attach the protect cap (43) on the screw (30).

cap (43) on the screw (30). Fix the leg extension bracket (8) to the front upright (3) use one set of Screw (30), washer (37) and nut (40), insert the two foam tubes (11) to the leg extension bracket (8), then attach the foam (24) to the foam tube (11).

HEAVY WEIGHT

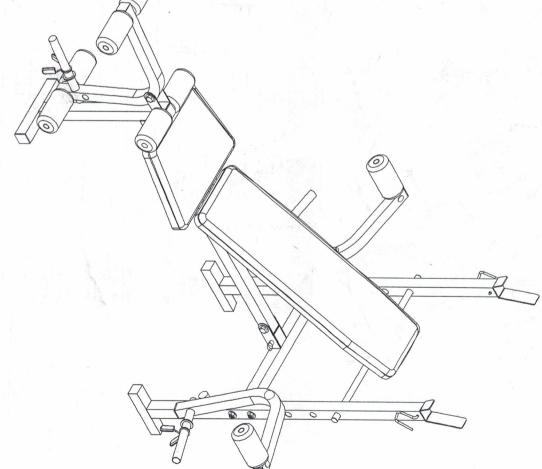

ORIGINAL INSTRUCTION MANUAL